

Firmware Upgrade Instruction

1st Step: Disable your PC computer webcam firstly,
to prevent the risk that the firmware is mis-load into PC computer webcam to cause it not working anymore.

my computer → click the right button of the mouse
→ “Device Manger” → Disable your pc webcam

2nd Step: Plug usb camera into the usb port of PC computer

3rd Step: Run firmware tool “USB_XU_BurnerAP”

load firmware “320x240 MJPG 60fps OV2710 -20260527.src” ,
update the camera with firmware.



4th Step: Plug off usb camera and re-plug in the usb camera to re-start the usb camera.

5th Step: Re-active your pc webcam, refer to 1st step.